


Option : In-Mail (Voice Mail)






Optional hardware and System setting is necessary to use In-Mail (Voice Mail) feature. Ask your NEC Authorized Supplier for the details.

■ Log-On to the In-Mail

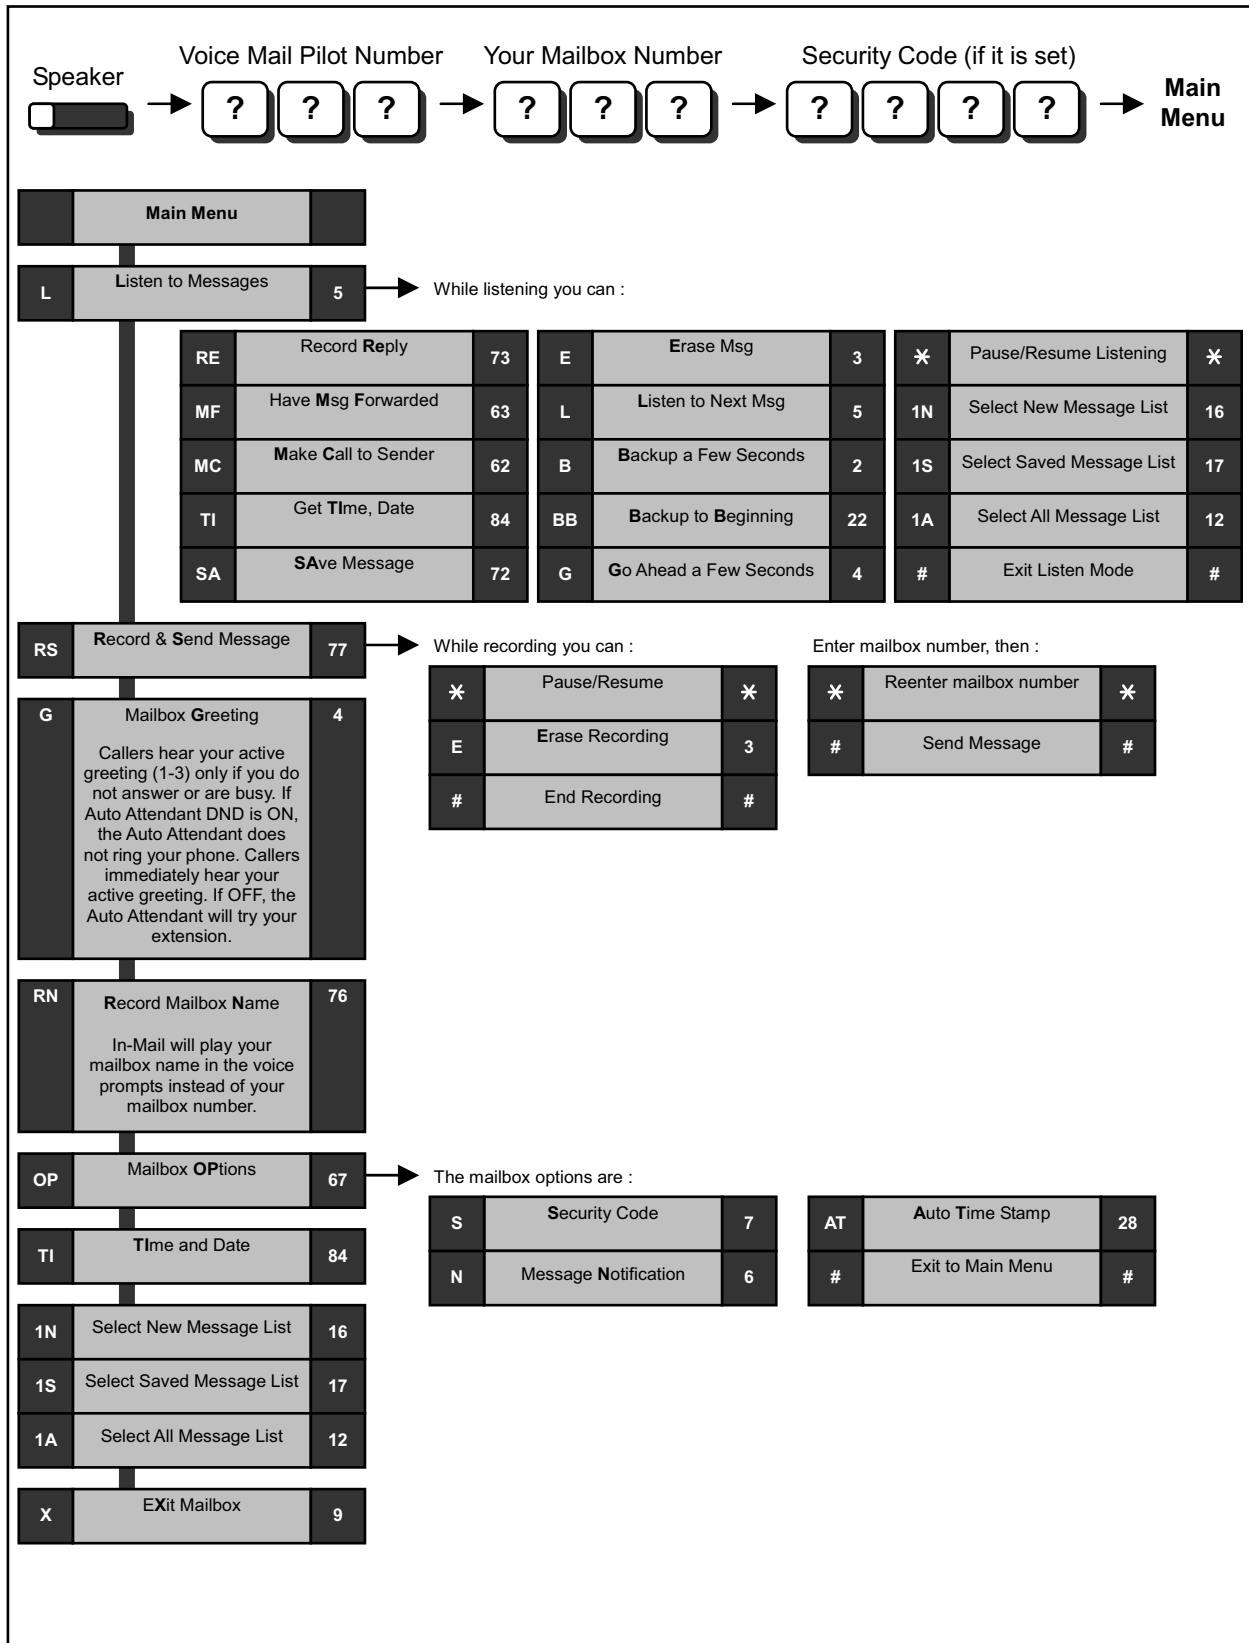


Option : In-Mail (Voice Mail)

■ Call Forward to Voice Mail

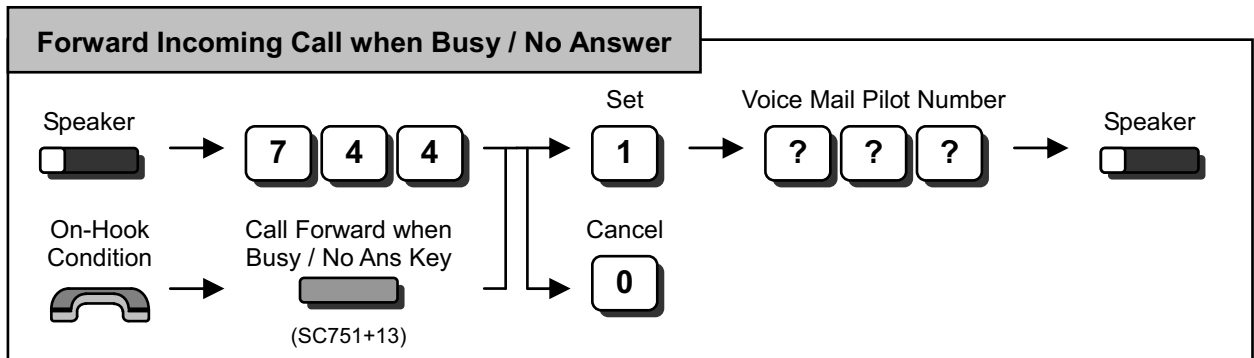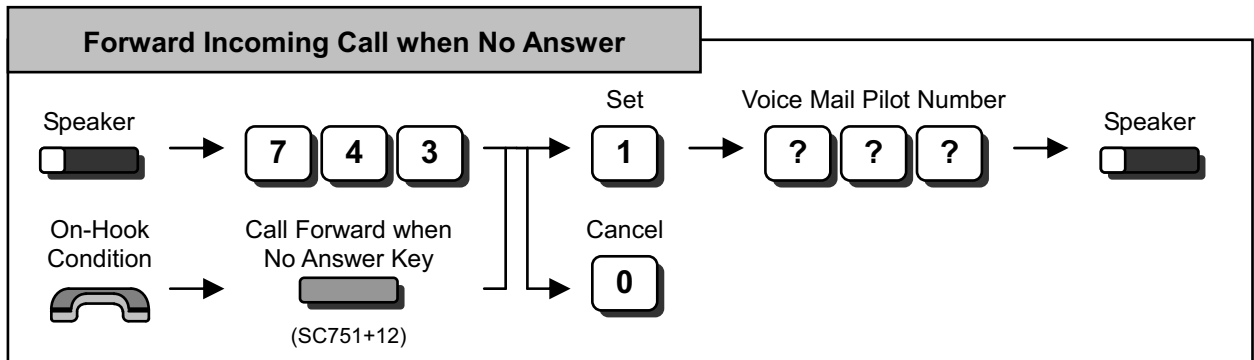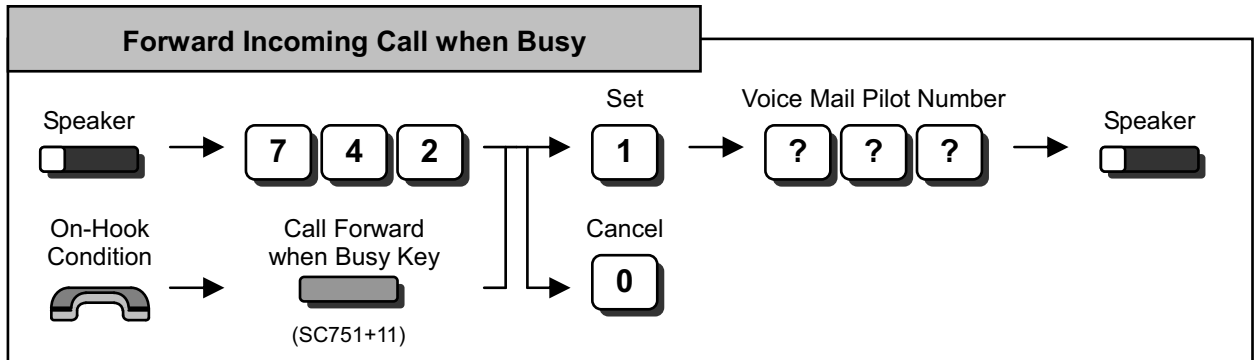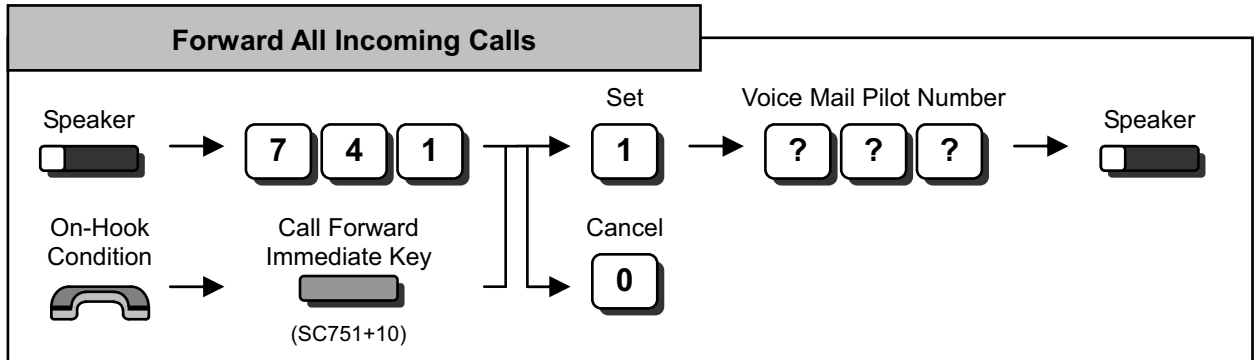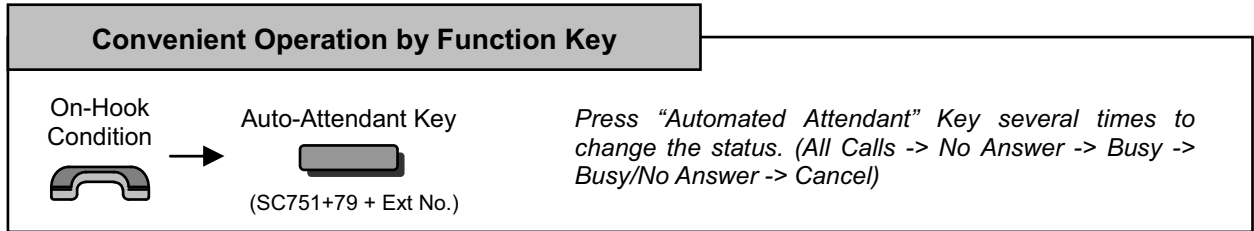


Option : In-Mail (Voice Mail)

■ Mailbox Greeting

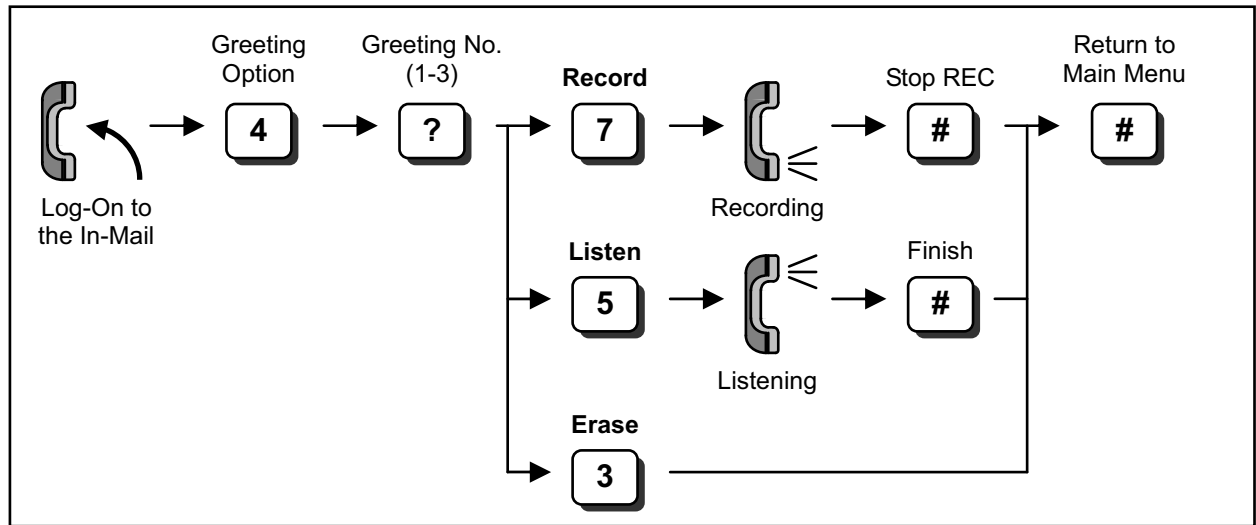

- Selected Greeting (one of three) becomes active.

■ Mailbox Security Code

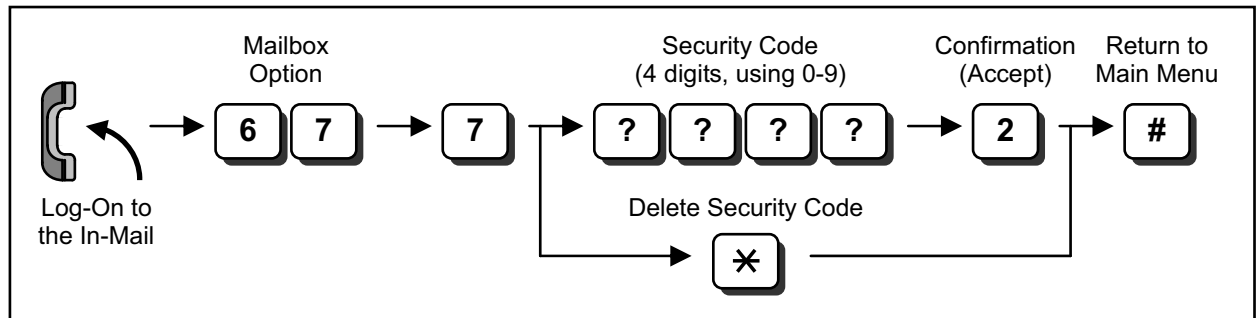

- Dialed Security Code can be canceled by pressing "4" instead of "2 (Accept)".
- In case the "In-Mail Advanced Features License (SL-VM-ADVANCE LIC)" is provided, or during Free Trial period (60 days after new installation), the type of Security Code can be assigned as below.
 - Dial 4 digits Security Code followed by "7" : Security Code for all log-on
 - Dial 4 digits Security Code followed by "6" : Security Code for remote log-on only
- System Administrator can delete a Mailbox Security Code.

Option : In-Mail (Voice Mail)

■ Listen to Left Messages in your Mailbox

